


# Water Pump Installation

Valeo Transmission    Part number  
Water Pump            506887

## WATER PUMP INSTALLATION

The mechanical seal of the water pump is designed to avoid that the coolant goes through to the bearing or that it goes out of the coolant system. Under working conditions, coolant liquid is impelled through the engine by the impeller of the water pump.

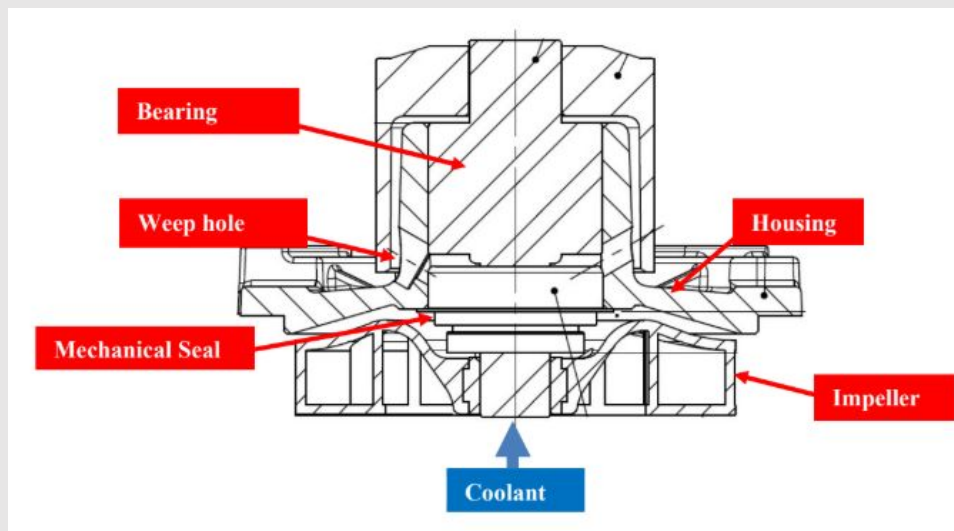

It is strongly recommended that before fitting a new water pump it is necessary not only to change the coolant, but also to clean the cooling circuit, otherwise when the pump starts to work again the coolant moves the residues / dirt around the cooling circuit causing the leakage through the mechanical seal and the pump's failure.



Website  
[valeoservice.com](http://valeoservice.com)



Technical Assistance  
**210 9858944**

Smart care for you  
[valeoservice.com](http://valeoservice.com)